



Installationsvorschrift für Gummiböden der Huber Technik Vertriebs GmbH

Allgemeines:

Die Montage von Gummibelägen darf bei einer Temperatur unter 10 Grad Celsius nicht vorgenommen werden.

Der Untergrund, auf dem die Rollen aufgebracht werden, muss eben, fest, sauber und trocken sein.

Die Gummirollen müssen vor der Befestigung mindestens 48 Stunden auf den Installationsflächen bei Raumtemperatur ausgelegt werden. Falls dies nicht möglich ist, müssen die Rollen mindestens 7 Tage bei Raumtemperatur gelagert werden.


Weichbettsystem mit Deckbahn 8GS WINGS

Verbundschaum: Schaumplatten sind, bevor Sie auf dem Untergrund verlegt werden, mit einer Folie komplett einzuschlagen. Mindeststärke der Folie 100 µ.

Verlegung: Deckbahn und Verbundschaum ausmessen, so dass ein Einrückmaß von ca. 20 mm gewährleistet ist. Anschließend geeignetes Abschlussprofil z.B. Kunststoff, Hartholz etc. (Größe ca. 40*40*1500 mm) anschrauben, damit der Verbundschaum fixiert ist. Den Verbundschaum nun verlegen und anschließend auf der anderen Seite das Abschlussprofil montieren. Die Deckbahn darüber ausrollen.

Befestigung: Liegeflächenbelag auf einer Querseite im Abstand von ca. 200 mm befestigen. Anschließend Belag 1 – 1,5 % vorspannen und im Abstand von ca. 250 mm beidseitig befestigen. Anschließend die andere Querseite fixieren. Nicht zu stark einschlagen → es dürfen keine Spannungen entstehen, die Matte darf sich nicht wölben!

Einstreu: Ausreichend und geeignetes Material verwenden z.B. Strohhäcksel, Substrat...

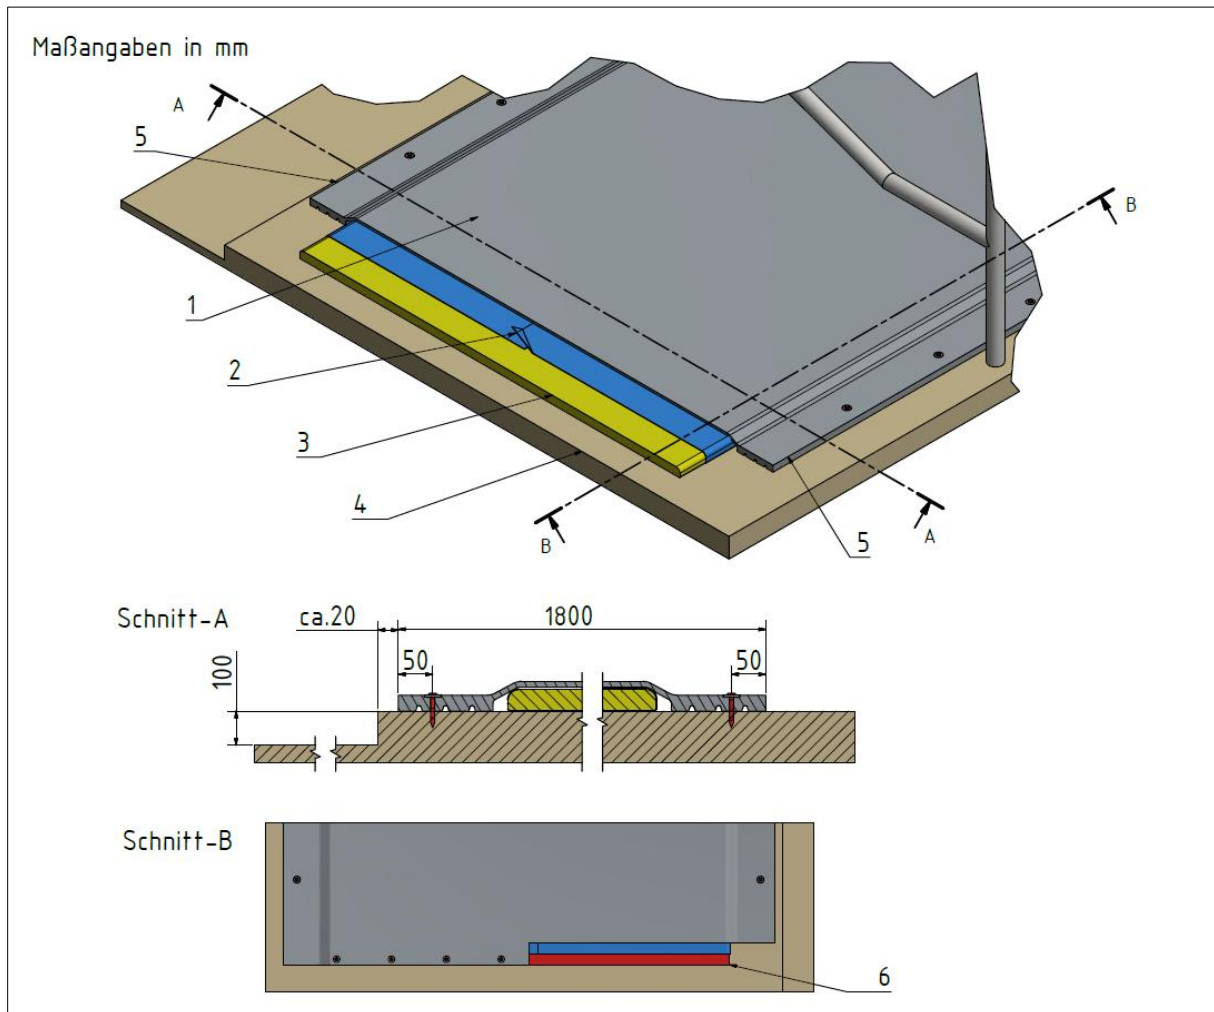

Legende: 1 Deckbahn 8GS WINGS, 2 Folie, 3 Verbundschaum, 4 Beton, 5 Vollgummi-Profil, 6 Abschluss-Profil

Pflege- und Wartungshinweise:

Die Gummiflächen müssen regelmäßig gereinigt werden.

Die Reinigungsmittel dürfen den Gummibelag nicht angreifen.

Die Gummifläche muss durch geeignetes Einstreu trocken gehalten werden.



Installation guide for rubber floorings of Huber Technik Vertriebs GmbH

General:

The assembly of rubber covering may not be done at a temperature below 10 degrees Celsius.

The ground on which the rolls are applied, has to be flat, firm, clean and dry.

At least 48 hours before installation, the rubber rolls have to be rolled out on the installation surface at room temperature. If this is not possible, the rolls must be stored at room temperature for at least 7 days.


Soft bed system with cover sheet 8GS WINGS

Composite foam: Foam plates have to be fully packed into a plastic foil before they are laid on the ground. Minimum thickness of the foil is 100 μ .

Installation: Measure cover sheet and composite foam so that the recess measurement is appr. 20 mm. Use as an end profile e.g. plastic, hardwood or similar (size appr. 40*40*1500 mm) so that the composite foam is fastened. Install the composite foam and fix it on the opposite side with an end profile. Now roll out the cover sheet in top.

Mounting: Fix cover sheet on transverse side every 200 mm. Prestress cover sheet 1 – 1.5 % and fasten with washer in the back and in the front max. every 250 mm. Fix cover sheet on opposite transverse side. Do not wrap too strong → it must not cause any tension, the mat must not bulge!

Litter: Use sufficient and suitable material such as chopped straw, substrate...

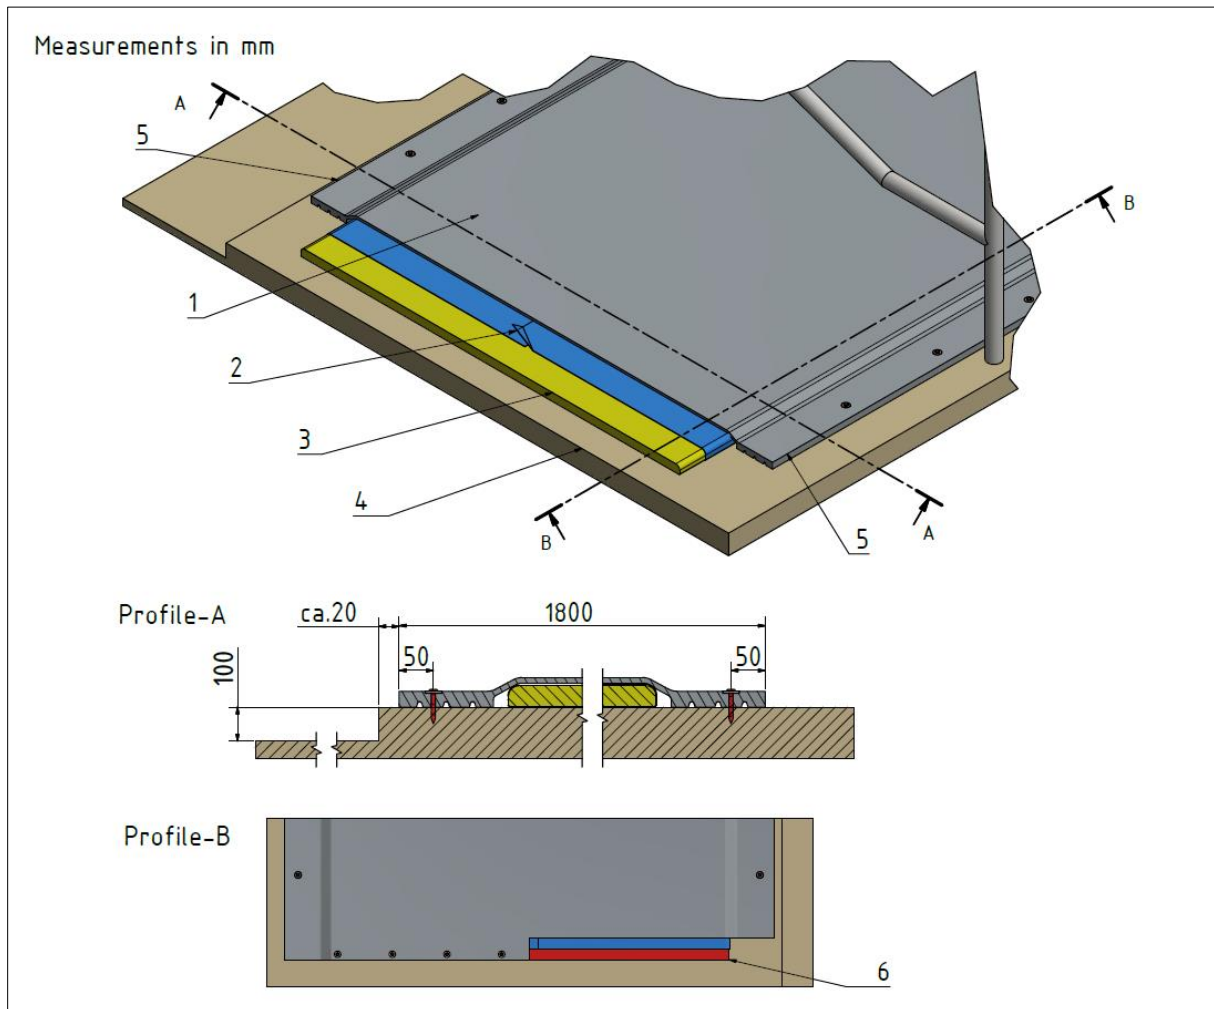

Legend: 1 Cover sheet 8GS WINGS, 2 Plastic foil, 3 Composite foam, 4 Concrete, 5 Full rubber profile, 6 End profile

Care and maintenance guide:

Rubber surfaces must be cleaned regularly.

The detergent must not attack the rubber covering.

The rubber surface must be kept dry with suitable litter.